


# BMW R1300R '25-

## M O U N T I N G I N S T R U C T I O N S

REF 22711

WINDSHIELD NG TOURING




ID.	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Cúpula Touring	Touring screen	1	22711W/H/FM3
2		Soporte izquierdo (L)	Left support (L)	1	SOPOR3P3-L22711
3		Soporte derecho (R)	Right support (R)	1	SOPOR3P3-R22711
4		Soporte central	Central support	1	SOPOR3P3-C22711
5		Tope de goma Ø11x Ø 5,5x 7mm	Ø11x Ø 5,5x 7mm Bumper foot	1	TOPEGOMA--22384
6		Tornillo M5x20 DIN 933	M5x20 DIN 933 Screw	2	TORNI-D933--537
7		Tornillo Allen M5x20 Ø11 ISO 7380	M5x20 Ø11 ISO 7380 Allen screw	2	TORNI-I7380-730
8		Arandela de goma Ø4,5 x Ø11 x 2mm	Ø4,5 x Ø11 x 2mm Rubber washer	2	ARAND-EPDM--722
9		Silentblock Ø9 x Ø6 x 8mm	Ø9 x Ø6 x 8mm Silentblock	4	AROPASACABLES-3
10		Casquillo con valona Ø12xØ6,8x7,3	Ø12xØ6,8x7,3 Bush with flange	4	CASQUI-1A---750
11		Tornillo allen M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 Allen screw	4	TORNI-I7380-493
12		Tapón tornillo M5 ISO 7380	M5 ISO 7380 Screw cap	4	TAPON-----85

# BMW R1300R '25-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**1**

**DISASSEMBLY  
DESMONTAJE**

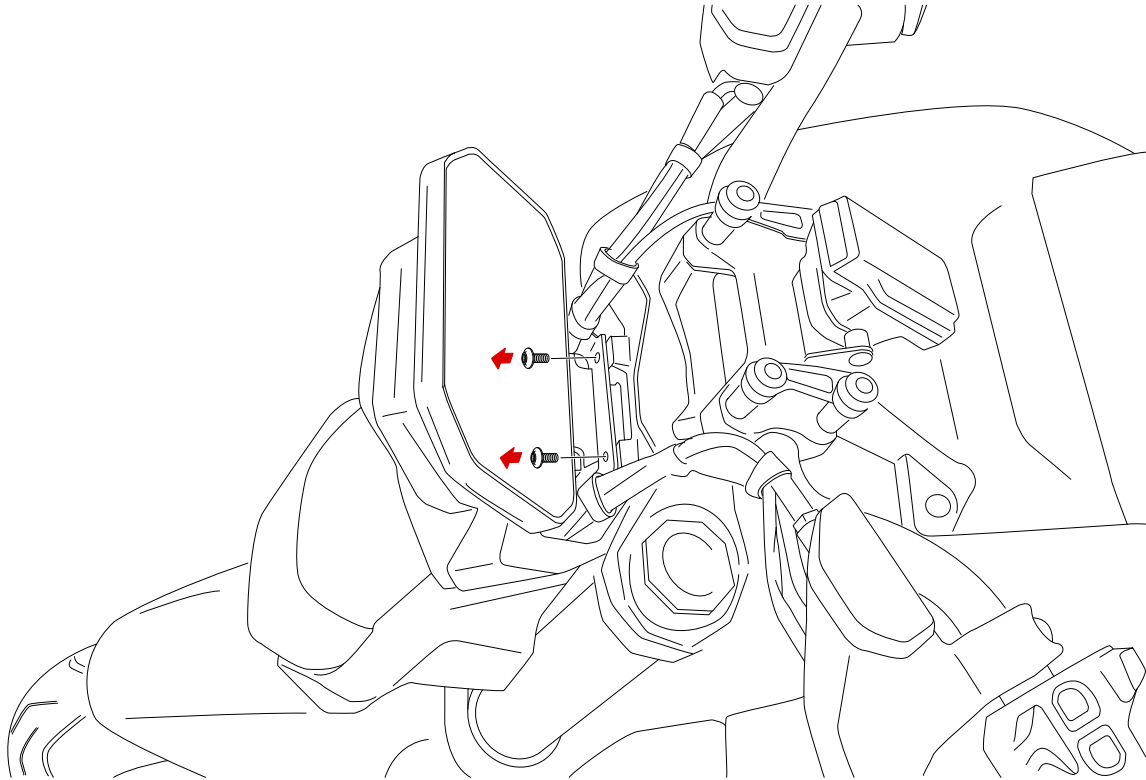

**2**

**ASSEMBLY  
MONTAJE**

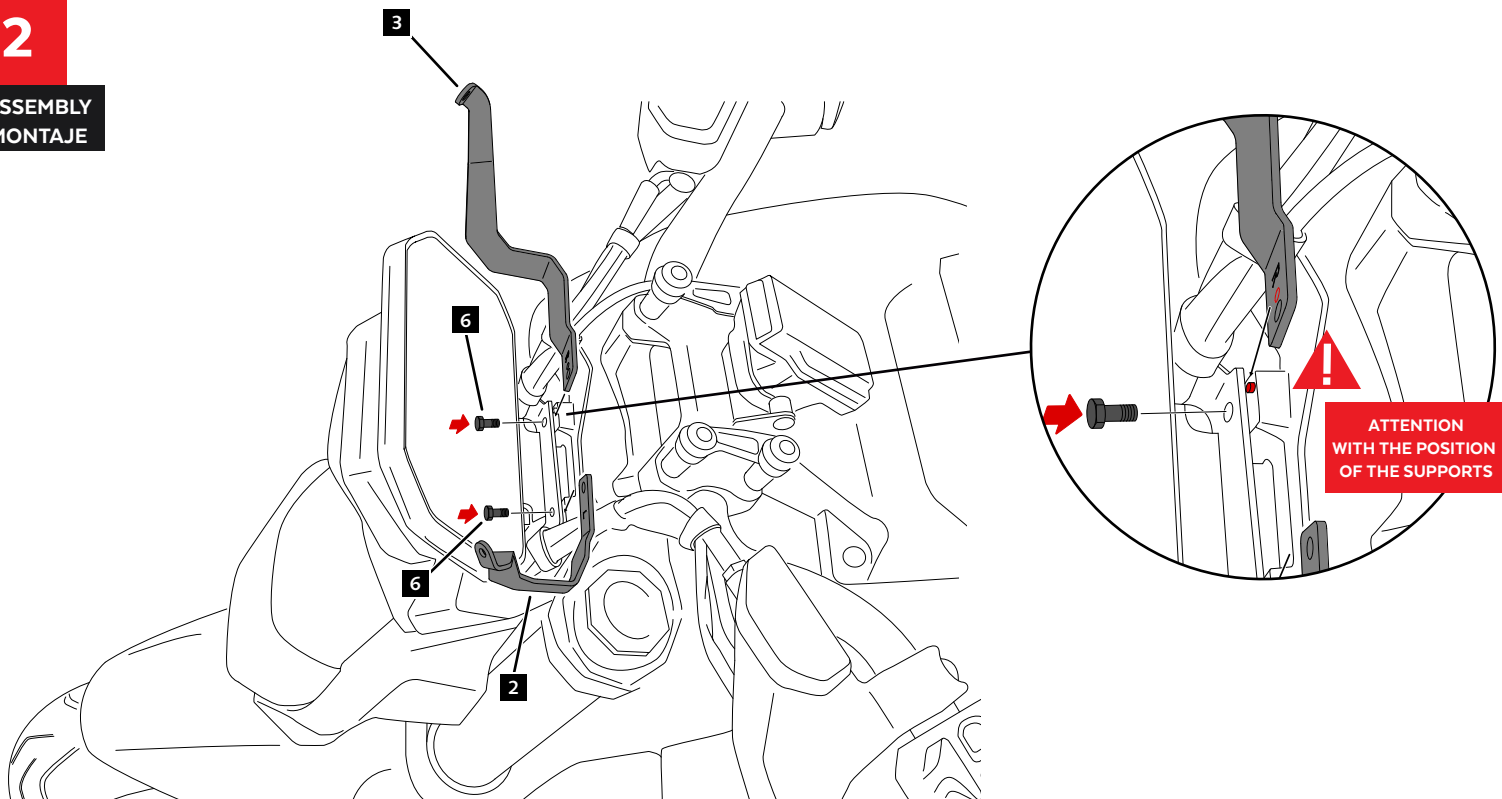


# BMW R1300R '25-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**3**

DISASSEMBLY  
DESMONTAJE

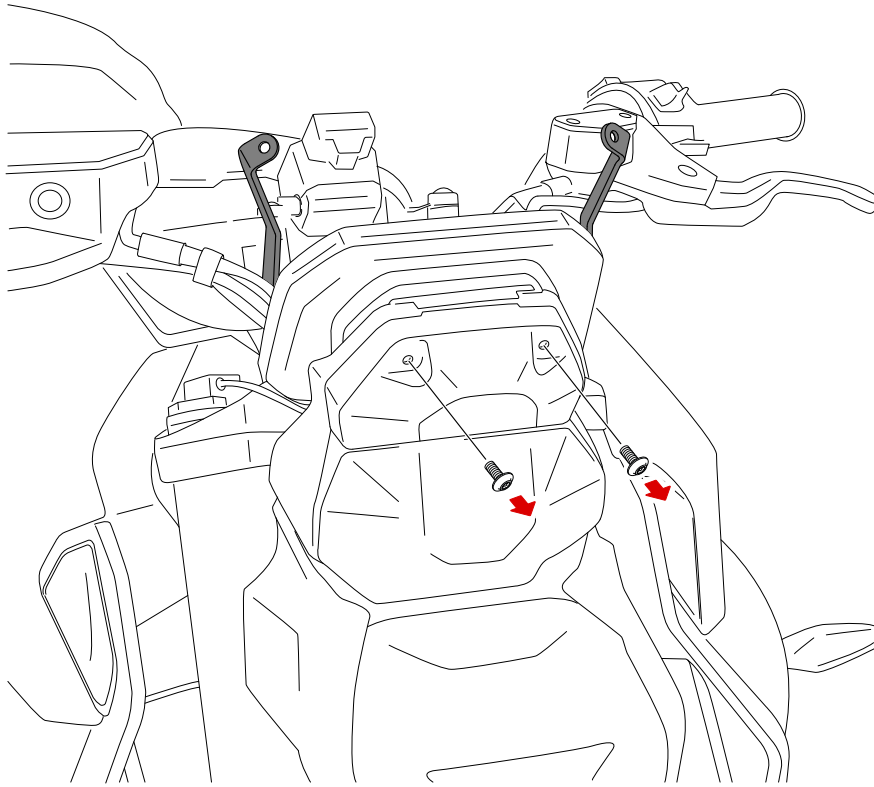

**4**

ASSEMBLY  
MONTAJE

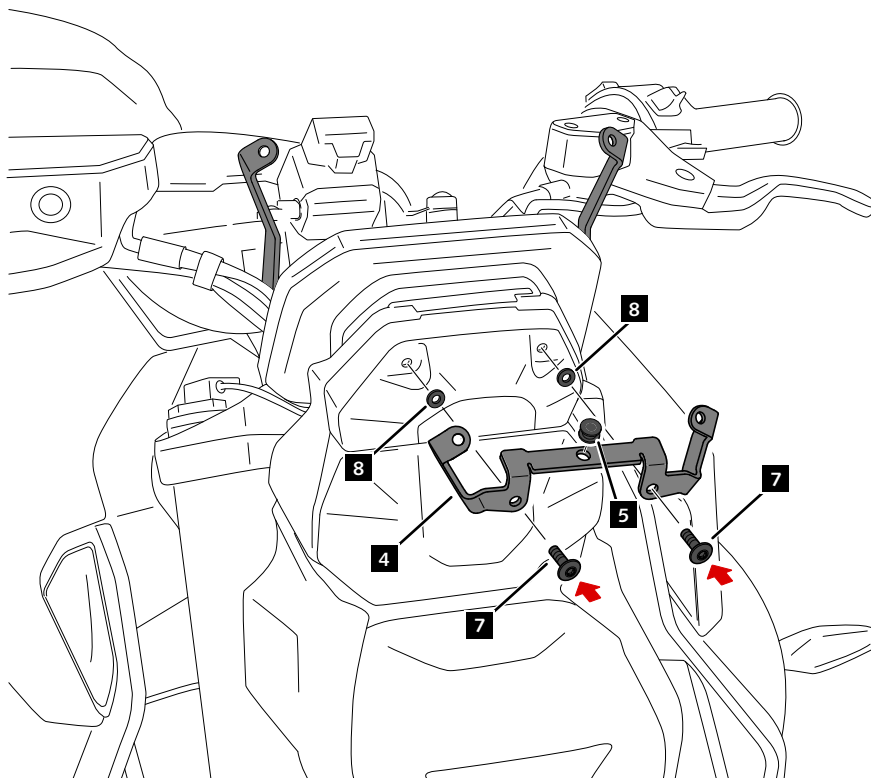


# BMW R1300R '25-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

**5**

ASSEMBLY  
MONTAJE

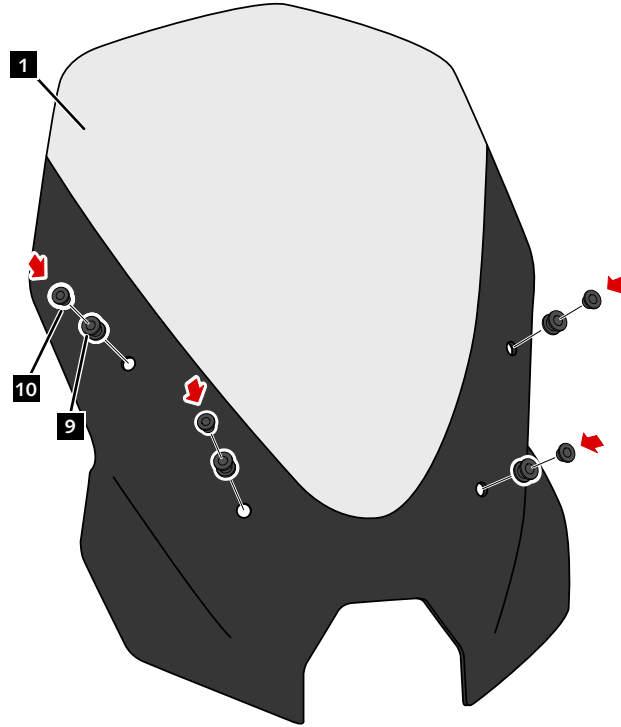

**6**

ASSEMBLY  
MONTAJE

